

Saturn[®]

ST-EK0031

THERMO POT



GB

THERMO POT

Dear Buyer!
We congratulate you on having bought the device under trade name "Saturn". We are sure that our devices will become faithful and reliable assistance in your housekeeping.

Avoid extreme temperature changes. Rapid temperature change (e.g. when the unit is moved from freezing temperature to a warm room) may cause condensation inside the unit and a malfunction when it is switched on. In this case leave the unit at room temperature for at least 1.5 hours before switching it on. If the unit has been in transit, leave it indoors for at least 1.5 hours before starting operation.

READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT.

INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

In order to correctly and durably use this product, please read the instruction manual carefully before use. Keep this instruction manual in a safe place for future reference.

1. Before connecting the appliance, check if the voltage indicated corresponds with the mains voltage in your home.
2. To protect against electrical shock do not immerse body, cord or plug in water or other liquid.
3. Place the airpot on a flat surface, at least 30 cm away from stove or other heat source.
4. Do not fill any liquid except clean water.
5. Do not fill water directly from a tap water faucet. Use a pitcher or kettle to keep electrical parts safe from splashes of water.
6. Never plug into the power source without filling the pot with water.
7. Do not over fill the pot with water and always check if the water level needs new supply.
8. Avoid splashes of water on the airpot's body specially on the top portion to prevent electrical shocks. In accidental case of water splashes, wipe it dry immediately.

9. Do not let cord hang over edge of table or counters, or touch hot surfaces.
10. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Not recommended to be used by children under 14 years old.
11. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
12. Service life – 2 years.

This electric airpot features:

- Automatic keep warm
- 360 degrees rotating base giving you a more flexible rotation
- Reboiling Function
- Durable, corrosion-proof stainless steel used for inner flask

Operation

1. Press the lid opening switch to unlock the lid's top cover and open it.
2. Pour water into the airpot up to the "FULL" water mark

Tips and Reminders when filling water:

- Never fill water in excess. Doing so will cause water overflow when boiling and may damage body while heating water. It may also damage the airpot after a short period of time.
 - Never fill water directly from a tap water faucet to avoid short-circuit and electric shock.
3. Be sure to close the top cover and lock it.


Note: Closing the top cover creates a clicking sound.

4. Plug in to the power source. The red indicator lights up to indicate the heating process.
5. Never open the top cover or fill the airpot with water during boiling. Do not cover the steam vent. When water has boiled, the red indicator turns off and the green indicator lights on signalling the keep warm state (within 75-95 °C).
6. Under the keep warm state, if you need to re-heat the water, just press "REBOIL" switch. In this process, the green indicator lights off and the red

indicator turns on for approximately two (2) minutes. After reboiling, it returns to the keep warm state. It will not keep warm if you will unplug from the power source.

7. When dispensing hot water, press the

Description

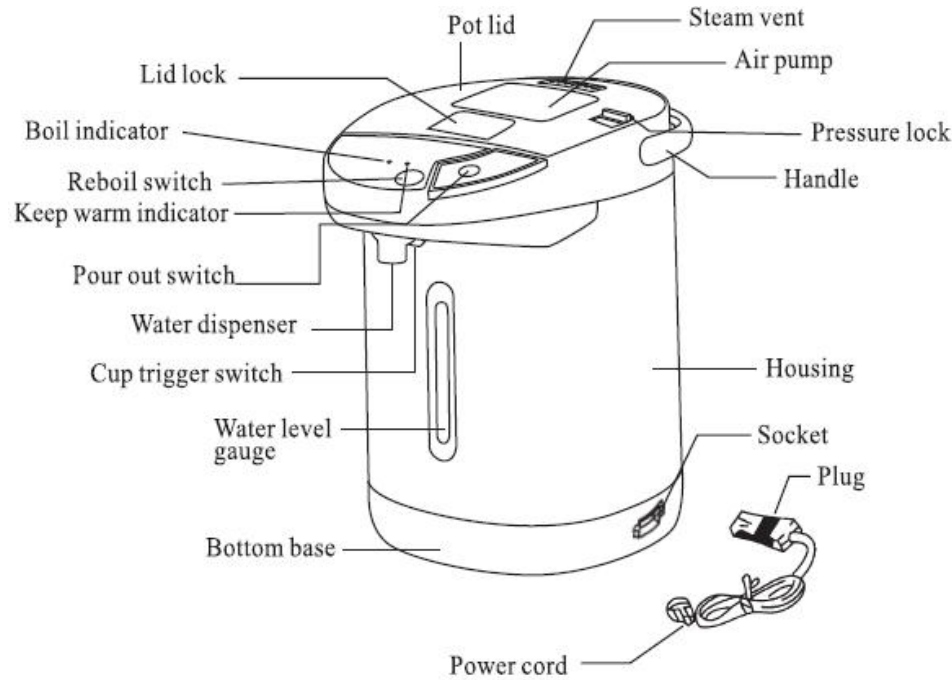

PRESSURE PAD with enough force to bring out water from the airpot. Exercise caution and extreme care when dispensing hot water from the airpot to prevent accidents and burn injuries.

Cleaning and Maintenance

- When cleaning the airpot, make sure to unplug from the power source and the hot water has cooled down completely before taking it out from the airpot. It is advisable to clean the airpot inside and outside before using for the first time.
- Cleaning the airpot should be scheduled once a month or as desired to ensure water quality and to lengthen service life of inner pot.
- When the airpot is not going to be used for a long time, it should be cleaned and dried before sealing in a plastic bag and stored in a safe, dry place.

Clean the inner pot

- Rust stains, scales, milky white

deposits are due to mineral elements from the water and may form in the inner pot wall and eventually corrode it in time.

- If not properly and regularly cleaned, the deposits formed on the wall may hardened permanently and this will cause operating problems. For examples, noticeable sound when boiling, different water taste, etc.

- 1. Clean it with soft foam or sponge and rinse well.
- 2. Clean with citric acid every one to three months or as desired.

Clean the top cover and body

- Do not use abrasive detergent, strong chemicals, solvents or cleaning agent when cleaning the plastic components.
-

1. Clean the top cover and body with semi-moist, soft preferably cotton cloth.
2. Afterwards use dry, soft cotton cloth to finish cleaning the parts. Notes:
 - Do not clean the parts under running

water or soak it in water.

- Never invert the airpot bottom up when cleaning.

Simple Troubleshooting

- If there is any abnormal phenomenon, please carefully read instruction manual again.
- Never attempt to take the product apart by yourself

Trouble	Troubleshooting
Not working	Please check if you have plugged it or not. Please check if you added water after the automatic power-off protection due to boiling without water. Please check if a sudden and short power interruption caused the abnormal electricity supply.
No water out	There is something wrong with the water dispensing motor. Please contact our nearest service center about the trouble.
Water pouring by itself	Please check if there is a short circuit. Please check if you filled excess water on the inner pot.
Indicator is normal but does not boil	The short circuit of the heat circle. Please contact our nearest service center about the trouble.
Boiling but cannot keep warm	The temperature control is damaged. Please contact our nearest service center about the trouble.
Low water temperature in Keep-Warm state	The temperature control is damaged. Please contact our nearest service center about the trouble.
Water pouring out by itself after boiling	Please contact our nearest service center about the trouble.
Water leaking	The connecting silicon pipe or stainless steel inner tube control is damaged. Please contact our nearest service center about the trouble.
Cannot Reboil from Keep warm state	The controller or soft touch switch is damaged. Please contact our nearest service center about the trouble.

Any other servicing should be performed by an authorized service representative.

Specification

Power: 800 W
 Rated voltage: 220–230 V
 Rated frequency: 50 Hz
 Rated current: 3.6 A
 Capacity: 2.8 L

Set

THERMO POT 1
 INSTRUCTION MANUAL WITH WARRANTY CARD 1
 PACKAGE 1

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.

The manufacturer reserves the right to change the specification and design of goods.

RU

! "Saturn".

1,5

1,5

6

360°

11.

12.

– 2

1.

2.

3.

4.

5.

6.

7.

8.

9.

10.

30



1.

2.

3.

7

! "Saturn".

()

1,5

1,5

- 7.
- 8.
- 9.
- 10.

- 11.
- 12.
-
-
-
- 1.
- 2.

- 2


360 °

-
-
-

- 3.
-
- 4.
- 5.

95°).
6.

(75-

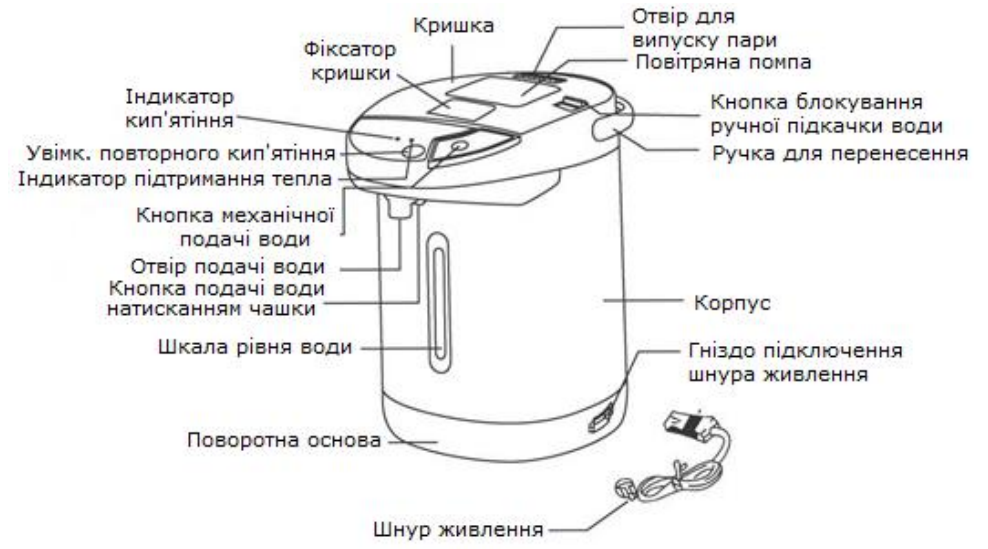

7.

- 1.
- 2.

-

30

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.

Saturn®

INTERNATIONAL MANUFACTURER'S WARRANTY

MEZINÁRODNÍ ZÁRUKA

GB

INTERNATIONAL MANUFACTURER'S WARRANTY

The Warranty is provided for the period of 2 years or more if the Law on User Right of the country where the appliance was bought provides for a greater minimum warranty period.

All terms of warranty comply with to the Law on Protection of the Consumer Rights and are governed by the legislation of the country where the product was bought. The warranty and free of charge repair are provided in any country where the product is delivered to by Saturn Home Appliances or authorized representative thereof, and where no restriction of import or other legal provisions interfere with rendering of warranty services and free of charge repair.

Cases uncovered by the warranty and free of charge repair:

1. Guarantee coupon is filled in improperly.
2. The product has become inoperable because of the Buyer's nonobservance of the service regulations indicated in the instruction.
3. The product was used for professional, commercial or industrial purposes (except for the models, specially intended for this purpose that is indicated in the instruction).
4. The product has external mechanical damage or damage caused by penetration of the liquid inside, dust, insects and other foreign objects.
5. The product has damages caused by non-observance of the rules of power supply from batteries, mains or accumulators.
6. The product was exposed to opening, repair or modification of design by the persons, unauthorized to repair; independent cleaning of internal mechanisms etc. was made.
7. The product has natural wear of parts with limited service life, expendables etc.
8. The product has deposits of scale inside or outside of fire-bar elements, irrespective of used water quality.
9. The product has damages caused by effect of high (low) temperatures or fire on non-heat resistant parts of the product.
10. The product has damages of accessories and nozzles which are included into the complete set of product shipment (filters, grids, bags, flasks, cups, covers, knives, sealing rings, graters, disks, plates, tubes, hoses, brushes, and also power cords, headphone cords etc.).

On the warranty service and repair, please contact the authorized service centers of "Saturn Home Appliances".

MEZINÁRODNÍ ZÁRUKA

Záruka se poskytuje na dobu 2 roky. V případě, že Zákon na ochranu spotřebitele dané země stanoví delší dobu, prodlužuje se záruka na tuto dobu.

Veškeré záruční podmínky odpovídají Zákonu o ochraně práv uživatelů a jsou řízeny zákonodárstvím státu, kde byl výrobek koupen. Záruka a bezplatná oprava se poskytují v každém státě, kam jsou výrobky dodány společností „Saturn Home Appliances“ nebo jejím zplnomocněným zástupcem a kde nejsou žádná omezení na dovoz nebo jiné právní předpisy omezující poskytnutí záručního servisu a bezplatné opravy.

Případy, na které se záruka a bezplatná oprava nevztahují

1. Záruční list je vyplněn nesprávně.
2. Výrobek byl poškozen kvůli tomu, že zákazník nesplnil pravidla použití, která jsou uvedena v návodu.
3. Výrobek byl používán k profesionálním, komerčním nebo průmyslovým účelům (kromě modelů speciálně určených pro tyto účely, což je uvedeno v návodu).
4. Výrobek má vážnější mechanická poškození nebo poškození, vyvolaná tím, že se dovnitř dostala tekutina, prach, hmyz a jiné cizí předměty.
5. Výrobek má poškození, která jsou vyvolána nesplněním pravidel napájení od baterií, sítí nebo akumulátorů.
6. Výrobek rozebírali, opravovali nebo modifikovali jeho konstrukci lidé, kteří nebyli zplnomocněni k opravě, bylo provedeno samostatné čištění vnitřních mechanismů a podobně.
7. Výrobek má přirozené opotřebení dílů s omezenou dobou použití, spotřebních materiálů atd.
8. Výrobek má vrstvu usazeniny uvnitř nebo zvenku termoelektrických ohříváků, bez ohledu na kvalitu používané vody.
9. Výrobek má poškození, která jsou vyvolána působením vysokých (nízkých) teplot nebo ohněm na termonestabilní části výrobku.
10. Výrobek má poškození příslušenství a nástavce, které jsou dodány spolu s výrobkem (filtry, sítky, sádky, baňky, mísy, víka, nože, šlehače, struhadla, kotouče, talíře, trubky, hadice, kartáče a také síťové šňůry, sluchátkové šňůry atd.).

V otázkách záručního servisu a oprav se obraťte na autorizovanou servisní střediska společnosti „Saturn Home Appliances“.

«Saturn Home Appliances»

1.

2.

3.

4.

5.

6.

7.

8.

9.

10.

1		8-904-345-83-18	+	+	+	+	+
21	« »	8 (84722) 9-52-07, 8-937-469-52-07	+	+	+	+	+
57	« - »	8(8453) 55-80-89, 8-964-848-45-06	+		+	+	+
12	« - »	8 (4852) 25-94-83	+		+		

UA

2

«Saturn Home Appliances»

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.

- 9.
- 10.

«Saturn Home Appliances».

№	Наименование	Спецификация	Телефон	Свойства		
				/	-	-
1	36	Hi-Fi	(064) 424-89-50	+	+	+
2	14		(065)632 21 83, 050-904-57-17	+	+	+
3	66		062744-60-38(39)	+	+	+
4	49	-	(04563) 633-19	-	+	-
5	50-82	-	(045) 63-68-413	+	+	+
6	57		(041) 43-406-36	+	+	-
7	43	" "	(0314 1) 43-432	+	+	+
8	3, 8	-	(044) 332-01-67	+	+	+
9	42	-	(0432) 46-50-01	+	+	-
10	61		(0432) 61-95-73	+	+	+
11	16	-	(0432) 464393; (0432) 468213	+	+	+
12	3		(0432) 64-24-57, (0432) 64-26-22	+	+	+
13	1		(0432) 509-191, 579-191	+	+	+
14	68, 1		(0562) 337-574	+	+	+

	, .420					
15	17 .130	-	(056) 778-63-25 (28)	+	+	+
16	. ,59		(0562) 35-04-09	+	+	+
17	. ,118		(0562) 67-60-44	+	+	+
18	,41		(056) 790-04-60	+	+	+
19	,9		(068) 851-33-33	+	+	+
20	188		(062) 3450607 0953204451	+	+	+
21	,129	-	(062) 349-26-81	+	+	+
22	, . ,1	-	(062) 3027569 (066)5082652	+	+	+
23	,8	" "	(0412) 471-568	+	+	-
24	,4 .222		(067) 410 2198	+	+	+
25	24	C	(0412) 47-07-42, 42-11-53	+	+	-
26	,50	-	(061) 220-97-65 (64)	+	+	+
27	,175		(061) 701-65-96	+	+	+
28	,83	-	(061)212-03-03	+	+	+
29	,75		066-085-75-39	+	+	+
30	19		(0342)559-525, 750-777	+	+	+

31	,14		(0342) 754737	+	+	-
32	,9	-	096-729-4038, 067-484-9888	+	+	+
33	,76		(04597) 57393	+	+	-
34	,161	-	(04736) 629-49	+	+	+
35	1	-	(044) 591-11-90	+	+	+
36	,1	" "	(044) 4269198	+	+	-
37	,9 57	-	(044) 369-5001 (063) 486-6999	+	+	+
38	,10		(06272) 2-62-23, (050) 279-68-16	+	+	+
39	,1	" "	(0522) 301-456	+	+	+
40	,2		(0522) 35-79-23	+	+	+
41	,98	-	(0522) 270-345, 349-585	+	+	+
42	,13		(097) 264-21-67, 776-67-70	+	+	+
43	,3 .5	" "	(04142) 5-05-04	+	+	+
44	,15-106		(06264) 5-93-89	+	+	+
45	,7		(050) 526-06-68	+	+	+
46	,44, .1		(05366) 39-192	+	+	-
47	,42		(056) 401-33-56, 404-00-80, 474-61-03	+	+	+
48	,9		(056) 4092302 03	+	+	+

49	,64/7		(0564) 40-07-79	+	+	+
50	,73	" "	(056) 440-07-64	+	+	+
51	,81		(050) 214-91-73; (066) 017-02-03	+	+	+
52	,49	-	(0642) 505-783	+	+	+
53	,50		(0642)50-57-83	+	+	+
54	,96		(0642) 494-217, 33-11-86	+	+	+
55	,1	-	(0332)290752	+	+	+
56	,15		(032) 244-53-44	+	+	+
57	,35	" "	(032) 2973631	+	+	+
58	,2		(032) 247-14-99	+	+	+
59	,116	" - "	(032) 245-80-52	+	+	-
60	,28		(032) 239-51-52 (032) 239-55-77,295-50-28, 295-50-29	+	+	+
61	,9	" "	032-267-63-26	+	+	-
62	,242		(062)322-55-50	+	+	+
63	,2	-	04337-64847;0432-468213	+	+	+
64	,24/1		(099) 262-11-18	+	+	+

65	,46		(03131)37-337, 37-336	+	+	-
66	,50,32/18		(0629) 41-06-50	+	+	+
67	,227	" - "	(0629) 473-000	+	+	+
68	,33	" "	(0512) 580-555	+	+	+
69	,49	" "	0512-58-21-80	+	+	+
70	,2		(0512) 58-06-47	+	+	+
71	,62	-	(05662) 22-488, (097) 402-71-95	+	+	-
72	,97,2	" - "	(05662) 4-15-03	+	+	-
73	,38		(055) 497-26-17	+	+	-
74	,38	" "	(041)4152010	+	+	-
75	,66 (2)		048-7317704; 7317703;	+	+	+
76	,90		(048) 700 17 37	+	+	+
77	,55	" "	(048) 715-10-25, (0482) 39-06-18	+	+	+
78	,67	" "	8(05632) 6-15-54, (05632) 6-23-42	+	+	-
79	,26		050-013-72-17, 0532-509889	+	+	+

80	' 14		(0532) 69-42-62	+	+	+
81	21	-	(0532) 69-09-46 (093)562-81-25	+	+	+
82	' 66		(0532)615-621	+	+	+
83	, 371	-	(04637)53-982 (093)753-38-28	+	+	+
84	' ,101/1		(046) 3738595	+	+	+
85	, . ,12	-	(0362) 26-67-53, 26-65-85	+	+	-
86	, ' . 26		(0692) 55-56-43, 45-36-99	+	+	+
87	' ,72	-	(0652)-69-07-78	+	+	+
88	' 17/1	" - "	(0652) 522-771	+	+	+
89	' ,32	-	(04733)-46-182	+	+	-
90	15 (' . .)		(06444)40289	+	+	+
91	' 171 /10	-	(245) 53-136	+	+	+
92	' ,19		(0542) 705-296	+	+	-
93	' ,17	SLT- Service	(0542) 78-10-13	+	+	+
94	' ,2	" "	(0352) 26-30-13, 23-17-97	+	+	-
95	' 1/24	" " -	(047) 44-46-614, (047) 44-46-134	+	+	+
96	' ,101		(0312) 661-297	+	+	+

97	' 12		(057) 717-13-39, 702-16-20	+	+	+
98	' ,3		(057) 734-97-24, 712-51-81	+	+	-
99	18 (' . . 42)	" "	(096) 595-37-46	+	+	+
100	' 1		(03142) 42-258	+	+	+
101	' 5		(0552) 29-60-42	+	+	+
102	' ,28		(0552) 43-40-33	+	+	+
103	' ,35		(0552) 420-235	-	-	+
104	' ,18		(0382)78-37-55, 78-37-73	+	+	+
105	' ,10/1	-	(0382) 723-241, 723-240	+	+	+
106	' 63		097-549-20-36	+	+	+
107	' ,7, .301		0472-633-728	+	+	+
108	' ,71		(0472) 435-389	+	+	+
109	146, .102	" - "	(0472) 563-478, 500-354, (096) 505-63-63	+	+	+
110	' ,77-1		(0462) 601585	+	+	+
111	' ,6		(0462) 724872, 724949	+	+	+
112	' ,105 ()		(0372) 55-48-69, 90-13-11	+	+	+
113	' ,265		(0372) 58-43-01	+	+	+

114	' . ,3	" - "	(050) 373-73-71	+	+	+
115	' . ,5	(.)	(050) 324-43-01	+	+	-

RU

GB

WARRANTY COUPON

**When purchasing the product,
please require its checking before you;
BE SURE
that the goods sold to you, are functional and complete
and that the warranty coupon is filled in correctly.**

This warranty coupon confirms the absence of any defects in the product you purchased and provides for free of charge repair of the product failed through the fault of the manufacturer throughout the period of warranty service and free of charge repair.

Failing the presentation of this coupon, in case of its improper filling in, infringement of factory seals (if any), and also in cases indicated in the warranty obligations, the claims are not accepted, and no warranty service and free of charge repair is made!

The warranty coupon is valid only in the original copy with the stamp of trading organization, signature of the seller, date of sale and signature of the buyer.

UA

CZ

ZÁRU NÍ LIST

**P i koupi výrobku
žádejte o jeho vyzkoušení ve Vaší přítomnosti,
P E S V D T E S E,
že Vám prodaný výrobek je dobře fungující a kompletní
a že záru ní list je vyplněn správně.**

Tento záru ní list potvrzuje, že na Vámi koupeném výrobku nejsou žádné vady a zajišťuje bezplatnou opravu nefungujícího přístroje z viny výrobce, během celé záru ní doby.

Bez předložení tohoto listu, při jeho nesprávném vyplnění, porušení plomb výrobce (jsou-li na výrobku) a také v případech, které jsou uvedené v záručním listě, nároky se nepřijímají a záru ní oprava se neprovádí!

Záru ní list je platný jenom jako originál s razítkem obchodní organizace, podpisem prodávající, termínem prodeje a podpisem zákazníka.

