

Saturn[®]

ST-HC8021

HAIR CLIPPER



GB
HAIR CLIPPER

Dear Buyer!
We congratulate you on having bought the device under trade name « Saturn» . We are sure that our devices will become faithful and reliable assistance in your housekeeping.
Avoid extreme temperature changes. Rapid temperature change (e.g. when the unit is moved from freezing temperature to a warm room) may cause condensation inside the unit and a malfunction when it is switched on. In this case leave the unit at room temperature for at least 1.5 hours before switching it on.
If the unit has been in transit, leave it indoors for at least 1.5 hours before starting operation.

 
Please read the instructions for use carefully and keep in a safe place for future reference.

**IMPORTANT SAFETY INSTRUCTIONS
WARNING-TO REDUCE THE RISK OF
BURNS, ELECTROCUTION,
FIRE, OR INJURY TO PERSONS:**
















Always unplug from the mains when cleaning.
Only use the parts supplied with the appliance.
Keep this product out of reach of children.
The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
An appliance never be left unattended when plugged into a power outlet.
Keep the power plug and cord away from heated surfaces.
Make sure the power plug and cord do not get wet.
Do not plug or unplug the product with wet hands.
Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
Charge, use and store the product at a temperature between 15 °C and 35 °C.
Service life – 2 years.

CAUTION
Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.

DESCRIPTION

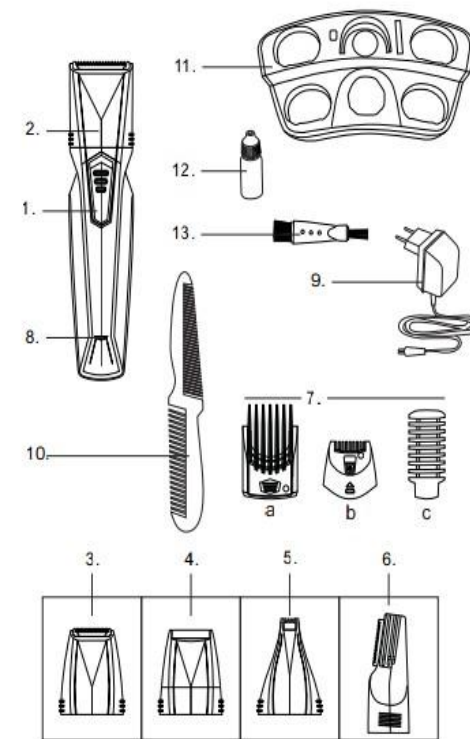

               1. On/Off Switch
2. Full size trimmer
3. Precision trimmer 32mm
4. Micro shaver 21mm
5. Nose, ear&eyebrow trimmer
6. Body hair trimmer-35mm
7. 3 Guide combs
 - a. For full size trimmer
 - b. For precision trimmer
 - c. For body hair trimmer
8. Charging indicator light
9. Charging transformer
10. Comb
11. stand
12. Lubricating oil
13. Cleaning brush

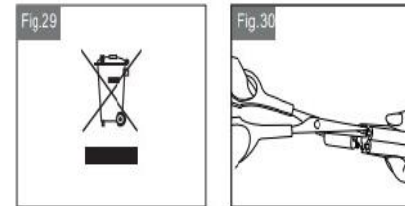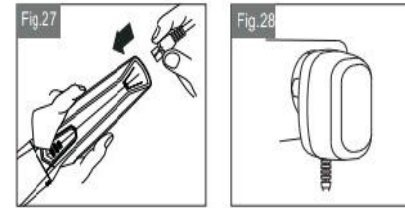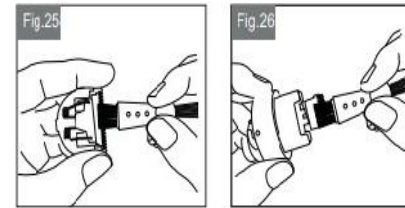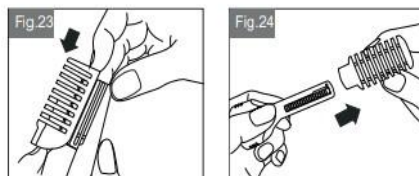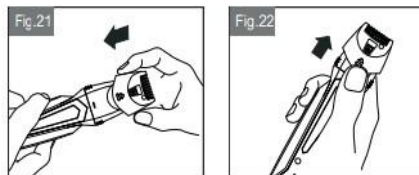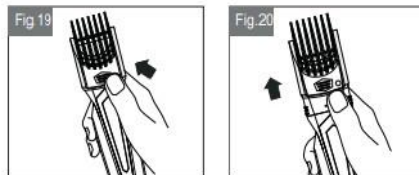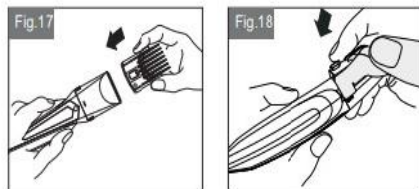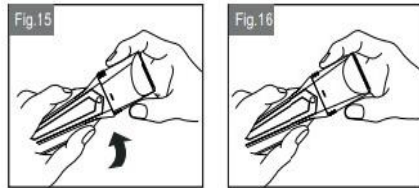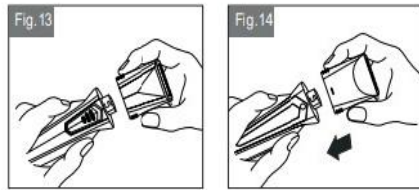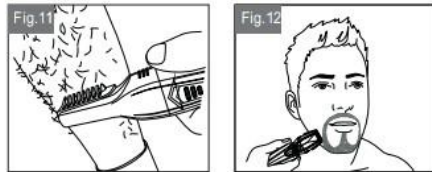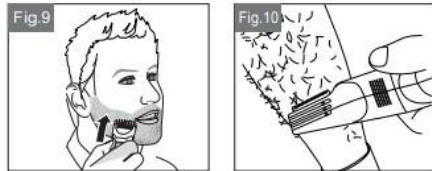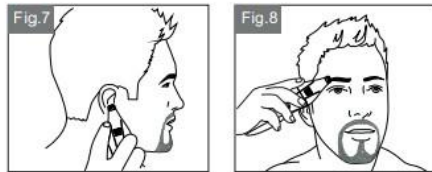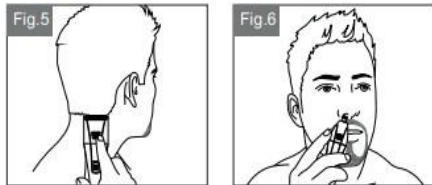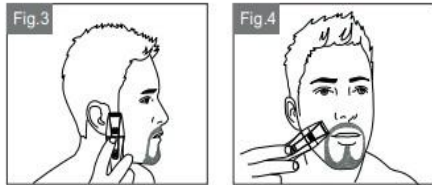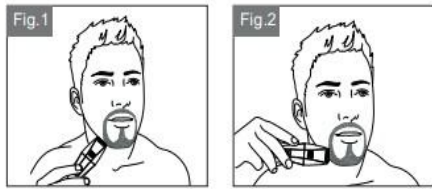

Later, turning around the appliance by clockwise, then the point will be aligned with the lock.(Fig.16)

Ways of matching positioning comb

No.	Level	Length (mm)
1	1-2	12
2	2-3	13.5
3	3-4	15
4	4-5	16.5
5	5-6	18
6	6-7	19.5
7	7-8	21
8	8-9	22.5
9	9-10	24

Put the positioning comb attachment balancely, then by sliding downwards (Fig.17)

Next when sliding here, there is one sign, then connecting the positioning with the sign.(Fig.18) when changing the positioning comb's level (with 9 levels: as chart shows, pressing the button, keep pressing it until you wanna stop. it can up and down by pressing the button (Fig.19) Then when removing the positioning comb, just put the finger in the pic shows position, then push out upwards (Fig.20).

No.	Level	Length (mm)
1	1	3.5
2	2	4
3	3	4.5
4	4	5

GETTING STARTED CHARGING YOUR PRERSONAL GROOMER

Before using your personal groomer for the first time, charge for 8 hours.

Ensure the product is switched off.

Place your personal groomer into the charging stand, connect the charging adaptor to the product and then to the mains. The charging indicator will light up.

If the product is not going to be used for an extended period time(2-3months),unplug it from the mains and store. Fully recharge your personal groomer when you would like to use it again.

To preserve the life of your batteries, let them run out every six months then encharge for 14-16 hours .

HOW TO MATCH THE APPLIANCE

Ways of matching appliance
When changing the parts, first use the finger put the part in the right position, directing to the body (Fig.13). Or like this ,turn around the body (Fig.14). Then inserting it diagonally. and here there is a sign, it appears the point aligned with the lock. (Fig.15)

Put the armpit positioning comb with 3 levels attachment balancely, then by sliding downwards, as pic shows.(Fig.23) Remove out of the armpit positioning comb upwards , as the pic shows.(Fig.24)

Ways of cleaning the appliance
When cleaning the appliance, just separate the appliance ,as the pic shows. Then use the cleaning brush, clear the dust by cleaning the inside parts.(Fig.25-26)

Ways of charging the appliance
Here, there are two methods to charge the appliance.one is inserting the appliance plug directly into the body. Another one is put the appliance body into the stand well(downwards) before charging it.(Fig.27)
The charging on the adaptor indicates that the appliance is charging.(Fig. 28)

HOW TO USE BEFORE YOU BEGIN

Always comb your beard or moustache with a fine comb before you start trimming.

ATTACHING AND REMOVING THE GUIDE COMBS

With the trimmer blade facing away from you, slide the guide comb on top of the clipper blade and click into position. With the trimmer blade facing away from you, carefully push the guide comb away from the trimmer blade.

TO THIN AND TAPER THE BEARD/MOUSTACHE (Fig.1)

Attach a guide comb to . If you are trimmer for the full size trimmer first time start with the maximum trimming length setting.

Turn the unit on. Place the flat top of the trimmer comb against the skin. Slowly slide the personal groomer through the hair. Repeat from different directions as necessary.

If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush/rinse off.

TO DEFINE THE BEARD/MOUSTACHE LINE (Fig.2)

Hold the personal groomer with precision Trimmer Blade facing you.

Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin. Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area

TRIMMING EDGE OF SIDEBURNS (Fig. 3)

Hold the personal groomer with Trimmer Blade facing you. precision Start with edge of sideburn, and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim to desired locations in facial area.

USING THE MICRO SHAVER TRIMMER (Fig.4)

Attach the micro shaver trimmer Hold the groomer so the micro shaver gently touches your face in a 45 degree angle.

Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave. NOTE: The micro shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your

entire face.

TRIMMING THE NAPE OF YOUR NECK (Fig. 5)

NOTE: You will need a hand mirror for this operation if performing it alone.

Before you begin, attach the Trimmer Blade. full size Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the personal groomer.

Using your other hand, hold the personal groomer to the base of your neck with the cutting unit facing up, and move the personal groomer up the length of the neck until it touches your finger covering the hair roots at the base of your head. Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

TO REMOVE HAIR FROM NOSE AND EAR (Fig. 6-7)

Attach eyebrow trimmer attachment. Gently move the groomer in and out of the nostril or ear and at the same time rotate. Avoid inserting the cutting unit more than 6mm into your nostril or ear.

TO REMOVE HAIR FROM EYEBROWS (Fig. 8)

Attach eyebrow trimmer attachment. Gently guide cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself. To remove the hairs completely lower onto the skin and move over desired area. Use slow and well-controlled movements.

To trim in the most effective way, move the appliance slowly against the direction of hair growth. (Fig. 9) To trim the body hair in the efficient way, remove what you want and where you like ,as the pic shows (Fig.10)

It will like this with body hair trimmer positioning comb after you finish removing the armpit hair. (Fig.11) To trim the detailed beard and moustache with positioning comb,as the pic shows. (Fig.12)

ATTACHING AND REMOVING THE TRIMMER COMB ATTACHMENT

NOTE: Always ensure the personal groomer is switched off before changing any attachments.

To remove, hold the personal groomer with one hand and turn the trimmer head anticlockwise with the other.

To attach, hold the personal groomer with one hand and turn the trimmer head clockwise with the other. Tips for best results

Beard, moustache and sideburn hairs should be dry. Avoid using lotions before using your personal groomer. Comb your hair in the direction that it grows. Remove trimmer comb attachment if you are: defining hairline edges such as sideburns, trimming the nape of your neck, trimming your beard line on front of neck.

CARE FOR YOUR PERSONAL GROOMER CLEANING AND MAINTAINING YOUR PERSONAL GROOMER

AFTER EACH USE

1. Turn the personal groomer off.
2. Gently brush the remaining hairs away/rinse under warm water from the guide comb and trimmer blade.

CLEANING CAUTIONS

Only the guide comb attachment and trimmer blade may be removed from the product for cleaning. Cleaning should only be done with a soft brush, such as the brush supplied with the product. Only use the light-grade oil supplied or sewing machine oil on the blades. Do not use harsh or corrosive cleaners on the units or their blades. Do not submerge in water as damage will occur.

STORAGE

Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140 F (60). Do not wrap the cord of the charging adaptor around the appliance.

PROTECT THE ENVIRONMENT

The product contains a Nickel Metal Hydride cell unit. Do not dispose the trimmer in household waste at the end of its useful life. Disposal can take place at our service centres or appropriate collection sites.

CAUTION: Do not put in fire or mutilate your battery packs they may burst or release toxic materials. Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for

recycling. By doing this, you help to preserve the environment (Fig. 29).

BATTERY REMOVAL

The battery must be removed from the appliance before it is scrapped.

- The battery is to be disposed of safely.
1. Unplug groomer from outlet to avoid risk of electrical shock.
 2. Remove rear groomer cover by first prying the rubber panel from the product with a flat head screwdriver. Pry the on/off switch from the product by head screwdriver. Unscrew the upper housing by head screwdriver and pry the upper housing from the product with a flat head screwdriver. This will expose the batteries.
 3. With wire cutters, clip the wires leading to the batteries.
 4. Remove the batteries from the product. Contact your local authorities for proper disposal.
- Lift the battery out of the housing by using a scissor cut down the connection between the body and the power line. Twist the connecting wires until they break (Fig. 30).

Specifications

Power:	3 W
Rated Voltage:	220-240 V
Rated Frequency:	50 Hz
Rated Current:	0,3 A

Set

HAIR CLIPPER	1
INSTRUCTION MANUAL WITH WARRANTY BOOK	1
PACKAGE	1

Environment friendly disposal
You can help protect the environment!



Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.

 
The manufacturer reserves the right to change the specification and design of goods.



! "Saturn".

1,5

1,5

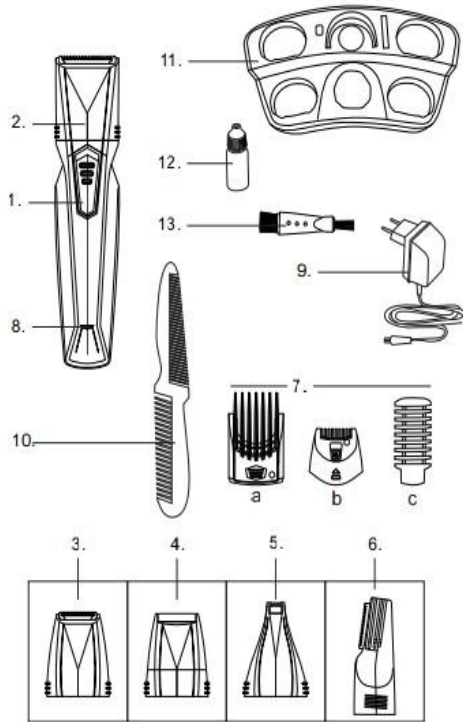



















- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7. 3
- a.
- b.
- c.
- 8.
- 9.
- 10.
- 11.
- 12.
- 13.






./
32
21
-35

32

15 - 35

                       - 2

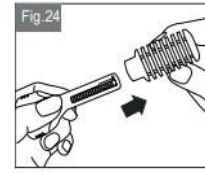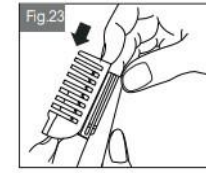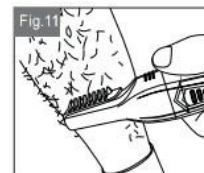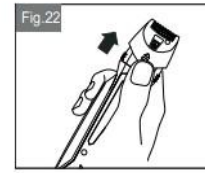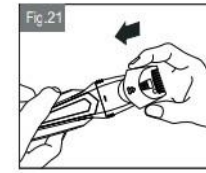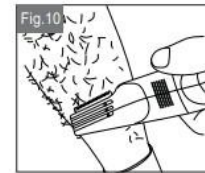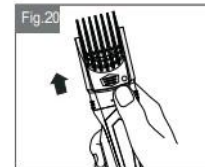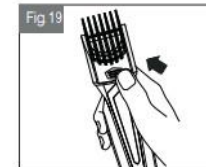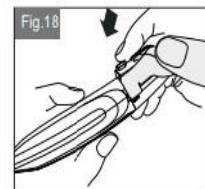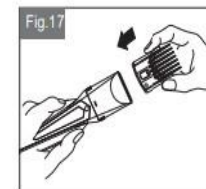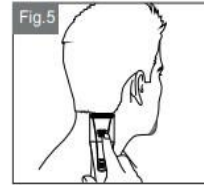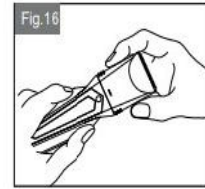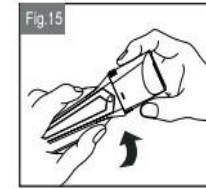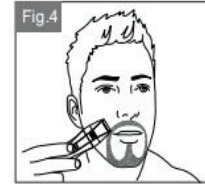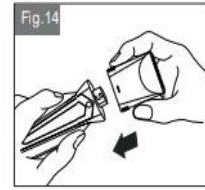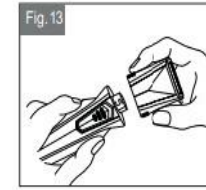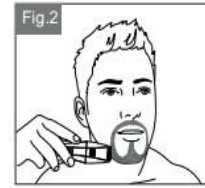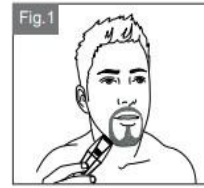

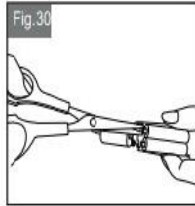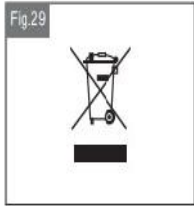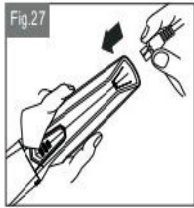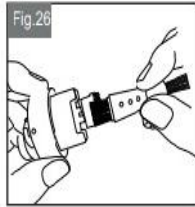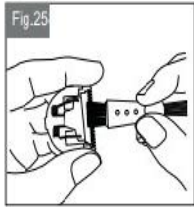

(. 15).

(. 16).

No.	-	()
1	1-2	12
2	2-3	13.5
3	3-4	15
4	4-5	16.5
5	5-6	18
6	6-7	19.5
7	7-8	21
8	8-9	22.5
9	9-10	24

(9)

(. 17).

(. 18).

(. 19).

(. 20).

No.	-	()
1	1	3.5
2	2	4
3	3	4.5
4	4	5

(3)

(2-3)

(. 23).

. 24.

(. 25-26).

14-16

(. 13).

(. 27).

(. 28).

/ /

(. 5)

/ (. 1)

6-7)

/ (. 2)

6

/

(. 8)

/

(. 3)

(. 9).

(. 4)

(. 10).

45°.

11).

(.

(. 12).

/
:
/

(.29).

UA

!
"Saturn".

- 1.
- 2.
- 3.
- 4.

1,5

1,5

(:) ,

- 1.
- 2.

(.30).

 
3
220-240
50
0,3

1
C
1
1

60



15 - 35 - 2


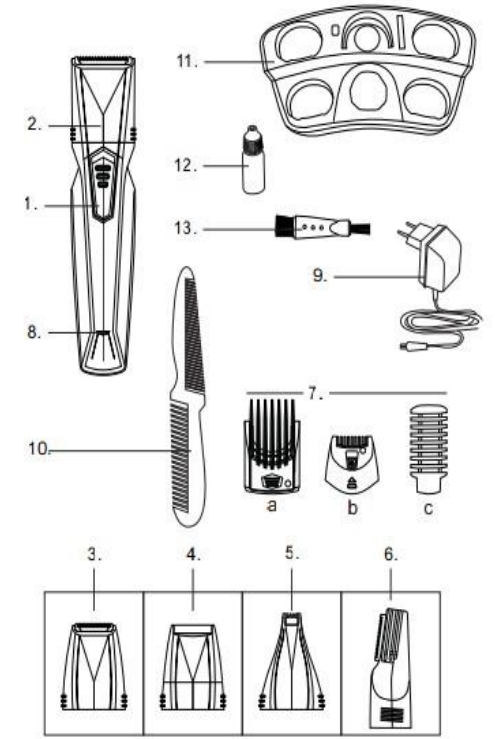


- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7. 3
- a.
- b.
- c.
- 8.
- 9.
- 10.
- 11.
- 12.
- 13.

32
21

35

  32

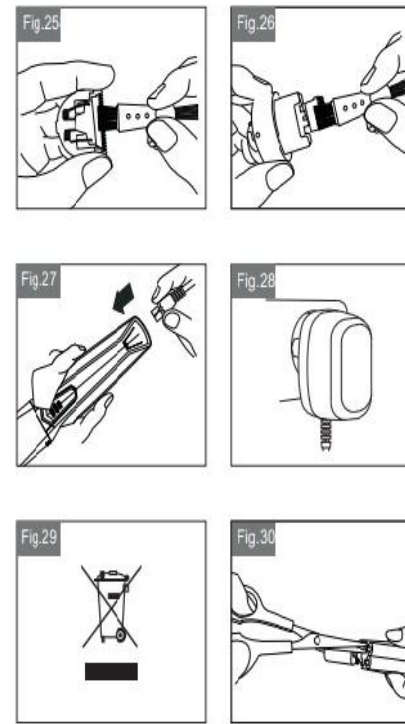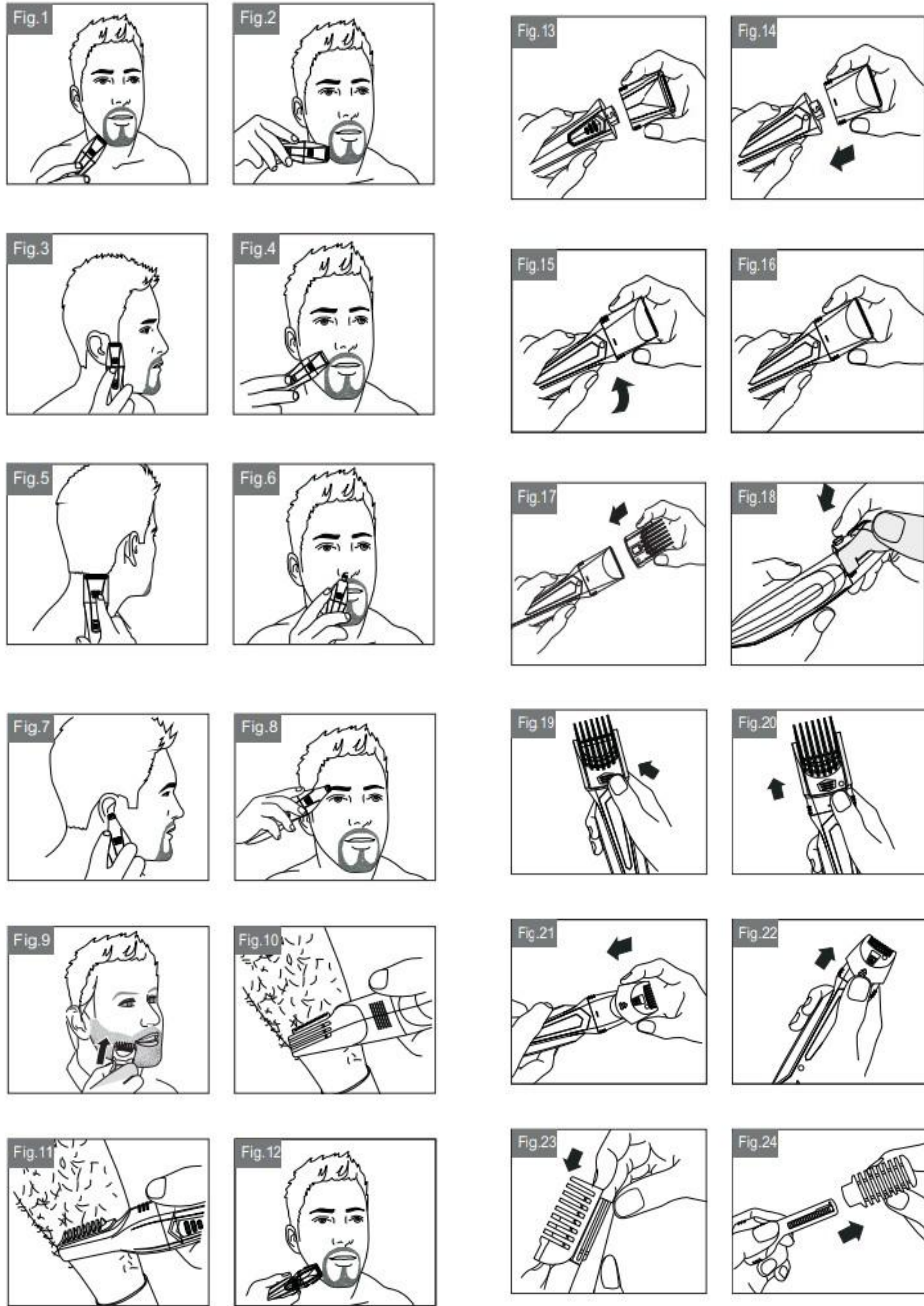

8

(. 15).

(. 16).

No.	-	()
1	1-2	12
2	2-3	13.5
3	3-4	15
4	4-5	16.5
5	5-6	18
6	6-7	19.5
7	7-8	21
8	8-9	22.5
9	9-10	24

(9

(. 17).

(. 18).

(. 19).

(. 20).

No.		()
1	1	3.5
2	2	4
3	3	4.5
4	4	5

(3

(2-3

(. 23).
. 24.

(. 25-26).

14-16

(. 13.).

(. 27).

(. 28).

(.1) /

(.2) /

(.3) /

(.4) /

45 °

(.5) /

(.6-7) / /

(.8) / /

(.9) /

(.10) /

(.11) /

(.12) /

(.30) /

1. /

2. /

3. /

4. /

1. /


2. /



(.30) /

3
220-240
50
0,3

1
1
1

60



049 062

29) /