

Saturn[®]

ST-HC8022

NASAL AND EAR HAIR
TRIMMER



GB

NASAL AND EAR HAIR TRIMMER

Dear Buyer!
 We congratulate you on having bought the device under trade name "Saturn". We are sure that our devices will become essential and reliable assistance in your housekeeping.

Avoid extreme temperature changes. Rapid temperature change (e.g. when the unit is moved from freezing temperature to a warm room) may cause condensation inside the unit and a malfunction when it is switched on. In this case leave the unit at room temperature for at least 1.5 hours before switching it on. If the unit has been in transit, leave it indoors for at least 1.5 hours before starting operation.

SAFETY INFORMATION

- The nasal and ear hair trimmer is intended for cutting hair only.
- Not suitable for children. Keep out of reach of children.
- Do not leave the equipment unattended when switched on.
- Switch the equipment off after use and replace the blade guard cap on the cutting head.
- If the equipment is not used for a long time, remove the batteries.
- The equipment meets the requirements of the EU guideline on Electromagnetic Compatibility (EMC)89/336/EEC.


DESCRIPTION



- 1 – Blade guard cap
- 2 – High-grade steel cutting system
- 3 – Cutting head
- 4 – On switch (I)
- 5 – Off switch (O)
- 6 – Battery case cover

STARTING OPERATION
 Use only leak-proof batteries. We recommend the use of an alkaline battery, type AA LR6 1.5V.

- Turn the battery case cover anti-clockwise and remove it (pic.1)
- Insert the battery with the positive (+) terminal in the direction of the cutting head (pic.2)

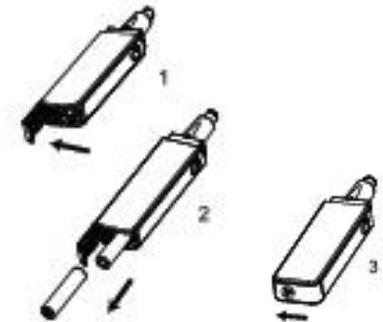

- Replace the battery case cover and turn it clockwise until it locks (pic.3)

Do not dispose of used batteries with household rubbish. Dispose of used batteries in an environment-friendly manner.

TRIMMING NOSAL HAIR



Switch the trimmer on and carefully insert the cutting head into the nostril, but no further than 0.5 cm. Remove nasal hairs with smooth circular movements.

