

Saturn[®]

ST-WM1615

WASHING MACHINE



GB


WASHING MACHINE

Dear Buyer!
We congratulate you on having bought the device under trade name "Saturn". We are sure that our devices will become faithful and reliable assistance in your housekeeping.

Avoid extreme temperature changes. Rapid temperature change (e.g. when the unit is moved from freezing temperature

to a warm room) may cause condensation inside the unit and a malfunction when it is switched on. In this case leave the unit at room temperature for at least 1.5 hours before switching it on. If the unit has been in transit, leave it indoors for at least 1.5 hours before starting operation.

We suggest that you carefully read this manual to ensure correct use of the machine and your security as well.

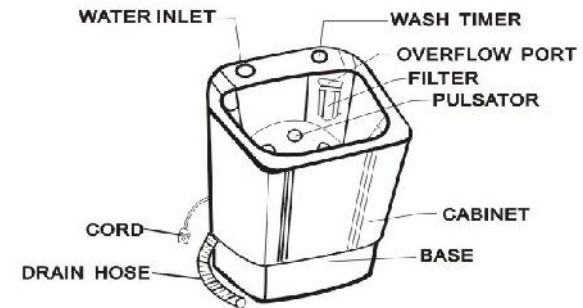

• **HOW TO FIX ACCESSORIES**
Put the spring coil into the end of drain hose, then connect the drain hose to base of washing machine and clamp the spring coil tightly.

• **PREPARATION BEFORE USE**

1. Set the machine evenly.
2. Connect the filler hose to supply port and faucet.
3. Lay down the drain hose with its port towards the drainage way.
4. Connect the ground terminal to earth. (Please make sure the ground terminal has been properly earthed to avoid electric shock.)
5. Before use make sure that technical data of your mains corresponds data indicated on the name plate of the appliance. Plug in the appliance only to the grounded socket.
6. Switch the power.

• **NOTICE**

1. The power cord of this machine is specially connected. Don not open the wire and connect to box by yourself. Refer servicing to qualified technicians or to the nearest service center.
2. If there is any abnormal noise and vibration, stop the machine to check where it occurred. (See the troubles and repairs)

3. Turn the wash timer in ascending manner only (example 0 to 5) avoiding turning it in a counterclockwise direction.
4. Do not put water over 60°C into tub, otherwise plastic areas such as pulsator may deform.
5. Make sure there are no things in washing tub before starting.
6. Do not wash clothes more than its suggested washing time.
7. Do not put heavy and hot things on the lid of the machine.
8. Do not use heavy acid, alkaline and other organic compound when washing.
9. Before washing, we must separate light color clothes and faded color clothes.
10. Children are not aware of potential hazards, when using electrical appliances. They should be supervised to ensure that they do not play with the appliance
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

12. It is not advised to use this appliance by children under 14.
13. Service life – 2 years.

• WASHING PROCEDURE

WASH:

1. Set the 'wash selector' to 'wash-rinse'.
2. Put the clothes to be washed into the wash tub. Select the water level according to the weight and material of clothes.
3. Put suitable amount of detergent into the wash tub.
4. Select the washing time according to fabric type and dirtiness of clothes (see ITEM 3) Turn the wash timer knob and press the 'Cycle selector'.
5. When the washing is finished, remove clothes from the wash tub and select 'DRAIN' from the wash selector.

WASH SUGGESTION

1. When washing heavily soiled cotton or linen fabric, wash them first in clean water away. Then wash them in water with detergent so as to reduce the consumption of detergent and improve the wash effect.
2. Add a small amount of detergent on shirt cuffs, collars and other heavily soiled area. Rub them by hands or brush.
3. Use liquid soap or high class detergent with less foam.
4. Use warm water may improve the washing effect.

WASH MODE AND WASH TIMER

Fabric Type	Silk, Wool	Cotton, Linen	Cotton & Hemp
Level of solid mode	Light	Light	Light
Wash Timer (minute)	2-5	5-10	10-15
Rinse Timer (minute)	2-3	3-5	5-8

• TROUBLES AND REPAIRS

Symptom	Possible cause	Correction
Abnormal noise and vibration	Power failure or plug dropped off	Insert plug well
	V-belt dropped off	Put on V-belt properly
	Pulley loosened	Tighten pulley screw
	Foreign matter jammed pulsator	Remove foreign matter

	Fraction between pulsator and wash tub	Adjust the gap between them
	Foreign matter jammed pulsator	Remove the foreign matter
	Over tighten V-belt	Adjust properly
Pulsator runs at low speed	Slacken V-belt	Adjust properly or replace with
	Motor fixing screws loosened	Tighten V-belt and screws

Technical Data:

Rated Wash Input Power: 200 W
Rated Voltage: 220-230 V
Rated Frequency: 50 Hz
Rated Current: 0.95
Max. Capacity: 2,5 kg

- Set
WASHING MACHINE 1
AFFUSION PIPE 1
INSTRUCTION MANUAL WITH WARRANTY BOOK 1
PACKAGE 1

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

The manufacturer reserves the right to change the specification and design of goods.

RU



- 1. 60°C, ()
- 2. 5.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 1. 11.
- 2.
- () « ».
- 3. (0 - 5).
- 4.
- 5.

- 1.
- 2.
- 3.
- 4.
- 3).
- 5.

(
 'Cycle selector' (
).

- 1.
- 2.
- 3.
- 4.

	2-5	5-10	10-15
(.)	2-3	3-5	5-8


-
-
-
-

--	--	--

6

200
 : 220-230
 50
 : 0,95 A
 : 2,5

1
 1
 1
 1

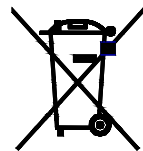

U

"Saturn".



-
- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
-
- 1.

- 2.
- 3.
- 5).
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 7

(«)

(0 -

60°C,
 (

1,5

1,5

